Care Instructions

- Ensure guy ropes are out at all times during use
- Never pack your tent away wet. If you must take your tent down when wet, ensure that it is dried completely as soon as possible to prevent mildew forming
- If mildew does form on your tent you need to remove it to prevent it spreading. For mildew, dirt, tree sap or bird droppings wash off with warm water and a soft brush, do not use soap or detergents this will damage the waterproofing of the fabric.
- It is not advisable to re-coat your canvas as a precautionary measure. This will reduce the breathability
 and durability of your tent. Zempire Canvas is precoated and will stay waterproof and breathable for
 many years
- 5. Do not use an open flame inside your tent. The fabric has been treated with a fire retardant but is in no way fire proof
- 6. This tent is not designed to withstand storm conditions. During strong winds, it is recommended that the tent be taken down
- 7. When storing your tent over winter do not store directly on concrete floors
- Do not leave your tent pitched unnecessarily for extended periods of time, UV light damages and will shorten the life of your tent

Condensation

It is important that lower vents are opened at all times to reduce the risk of condensation. During humid or damp conditions, it is recommended that inner door covers are opened to expose the mesh layer to allow additional airflow throughout your tent. Do not use foam squabs or non bonded mats directly on the tent floor. This will cause condensation between the mat and floor and if not dried out can lead to mildew foaming.

5 Year Tent Guarantee

Please take time to read about the protection we offer you

All our tents come with a guarantee designed to protect you as our valued customer. Flow Imports Ltd, the makers of Zempire Camping Equipment tents, will repair or replace this tent, at their discretion, should it fail due to faulty materials or manufacture for a period of 5 years from the date of sale.

The Guarantee is subject to the following conditions:

- The Guarantee only applies to an original purchaser who purchased this tent from an approved retail
 outlet
- 2. The Guarantee does not apply if the tent has been used for anything other than reasonable personal camping use. Commercial use (e.g. rental) or continuous use as a residence are expressly excluded
- 3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by Flow Imports Ltd), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, insect or mildew attack, or any other cause reasonably beyond the control of Flow Imports Ltd are not covered
- If redress is sought under the terms of this Guarantee, then the tent must be returned by the purchaser
 to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with
 proof of purchase
- 5. All transport costs and any other indirect costs are excluded from the Guarantee.
- Flow Imports Ltd reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee
- The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, Flow Imports Ltd:
 - a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
 - **b)** limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at Flow Imports' option).

This tent has been made with meticulous care and attention to detail. Providing it's properly looked after and correctly stored, it will help you enjoy all that nature has to offer for years to come.

Get out more - you owe it to yourself.

For a detailed description of all the features and specifications of this product please visit our website.

WWW.ZEMPIRECAMPING.COM







Practice pitching your tent at home to ensure you understand the process



Pick A Site

When finding a site for your tent, try to find an area that is sheltered, flat, and free from sharp objects. If possible position your tent with the front door facing away from the prevailing wind. Also try not to pitch your tent under trees as falling branches can damage the tent and falling sap can damage the fabric



When you take your tent out for the first time, take a moment to see how it is packed or take a photo on your phone. This will help you when it comes to packing your tent away. Separate and identify the different parts in

- Tent

- Pump

- Pressure release valve

- Guy Ropes (Pre-attached) - Additional Guy Ropes

- Pressure gauge - Pegs

- Awning Pole Set



Pump Setup

Your Zempire ® single action pump includes a pressure gauge and pressure release valve to ensure that the poles are inflated to the correct level. The pump accessories should be assembled in the following configuration



Layout

Unroll the tent with the floor facing down. Peg out the 4 corners and the central living area as shown ensuring there is significant tension between and the floor sits as flat as possible. For best results pegs should be angled away from your tent at 45°



Make sure the 5 taps on the right hand side of the tent are closed off

Connect the pump to the Boston Value and inflate to between 7 and 9 PSI. The pressure release valve will "hiss" when 9 PSI is reached. It is important not to over inflate the tubes. It is recommended that during very hot weather 7 PSI is used to provide room for expansion during the day. In cooler or windier conditions 9 PSI is recommended. As each pole inflates it may be necessary to support the centre of the pole until they assume their correct shape. It is also a good time to ensure that the base of each pole is sitting correctly on the Velcro patches of the tent floor. Poles can sometimes move off the Velcro during the pitching process.

Close the isolation taps inside the tent




Setting The Floor

It may be necessary to align the base of each pole so that the floor sits flat and taught. You may also need to re align the corner pegging points so the floor sits flat.





Awning Setup


- 1. Connect the steel awning poles together A1 to A2 (x4), RA to RB, RC to RD. R2 to R3 to R4 to R5
- 2. Insert the end of R2 ridge pole into the pocket on inside of awning above central air pole
- 3. Insert spike of RA/RB pole through hole at end of R5 and then through the eyelet at the end of awning
- 4. Extend A4/A5 pole so roof sits taught, the clamp of the flip lock should face downwards
- 5. Insert spikes of A1/A2 poles through evelets on either side of awning and guy out at 45°
- 6. RC/RD pole should be used to support the center of the ridge pole during windy conditions

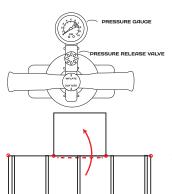












Pegging

Peg the remaining peg loops around the tent. Durable steel pegs are included with your tent which will be suitable for the majority of conditions. However, if you are camped at a rocky or loose sandy location it may pay to purchase more specialized pegs. A range of specialized Zempire ® Pegs are available.





Guv Lines

Guy lines are pre-attached on all Zempire ® tents. It is recommended that guy lines are used at all times. It is important not to over tighten guy lines. They should sit taught but should not distort the shape of the tent

Deflation

- Open all isolation taps inside of the tent
- Remove and clean all awning poles, do not store poles inside each other
- Unpeg all guy ropes and roll up to ensure they do not get tangled during packing
- Unpeg the peg points excluding the 4 corners.
- Open all 5 air release taps. These taps should remain open during pack down process
- Carefully walk over the air tubes to expel as much air as possible
- Unpeg the 4 corners of the tent
- Clean and dry pegs before storing in the bag
- Fold Awning over the body of the tent
- Fold bedrooms over center room
- Fold in 1/3s
- Roll towards the outlets and attach tension straps
- Place inside carry bag

Weathering Your Tent


When you first get your tent you will need to weather it. This is a process of soaking the fabric to ensure that all the thread swells up filling stitch holes and creating a watertight surface. When you pitch your tent for the first time soak the fabric with a garden hose until the fabric looks visibly damp. Allow to dry and repeat for two or three times.


Your tent will get more watertight the more you use it. Do not be concerned if you have a small amount of water coming through the seams on the first few times you get heavy rain.









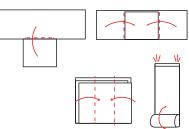

Natural Fibre

Zempire Canvas is made of combination of Natural Cotton for breathability and water fastness and polyester for strength.

Please note that as cotton is a natural fiber you will notice variances of both color and thickness of the thread. This is normal and is a characteristic of a natural and breathable fiber.

